



UPTIVITY
Agile WFO for SMB

Customer Guide to ShoreTel TAPI- VoIP Integrations

Customer Guide to ShoreTel TAPI-VoIP Integrations

Version: ShoreTel TAPI-VoIP versions 14.2 GA19 (ShoreTel Connect) - 21.90.4128.0 R1807 (Mitel MiVoice Connect) are supported. This guide should be used with NICE Uptivity 17.3 or later.

Copyright: ©2020 NICE inContact, Inc.

Contact: Send suggestions or corrections regarding this guide to documentationrequests@incontact.com.

Table of Contents

Introduction.....	5
Audience.....	5
Goals.....	5
Assumptions.....	5
Need-to-Knows	6
What's New in this Version	6
Customer Responsibilities	6
ShoreTel TAPI-VoIP Integration Overview.....	7
Known Limitations	8
ShoreTel Requirements	8
Hardware	8
Software	9
Licensing	9
NICE Uptivity Requirements	9
Hardware	9
Software	9
Licensing	9
Customer Configuration Overview	9
Customer Integration Tasks.....	10
Configure Contact Center Integration (Optional)	10
Install ShoreTel Remote Server.....	11
Customer Guide to ShoreTel TAPI-VoIP Integrations	3

Introduction

Register ShoreTel Remote Server 11

Customer Administration Tasks 13

Introduction

Audience

This document is written for customers and prospective customers interested in using NICE Uptivity in ShoreTel VoIP telephony environments. Readers who will perform procedures in this guide should have a basic level of familiarity with IP telephony, general networking, the Windows operating system, the ShoreTel hardware and software in use, and NICE Uptivity.

Goals

The goal of this document is to provide knowledge, reference, and procedural information necessary to understand a proposed ShoreTel/NICE Uptivity integration using TAPI-VoIP, and to configure ShoreTel to support the integration.

This document is NOT intended as a specific system or network design document. If further clarification is needed, consult with your telephony vendor.

Assumptions

This document assumes the reader has access to an Uptivity Sales Engineer, Project Manager, or other resource to assist in applying this information to the reader's environment.

Need-to-Knows



To facilitate ease of use, this document takes advantage of PDF bookmarks. By opening the bookmark pane, readers can easily refer to the portion(s) of the guide that are relevant to their needs. For example, the Uptivity application administrator can click on the **Customer Administration Tasks** bookmark to jump directly to that section.

To expand and collapse the bookmark pane, click on the bookmark icon on the left side of the document window.

For information and procedures related to Uptivity configuration, consult the Uptivity installation team.

This integration combines ShoreTel TAPI with passive VoIP recording. Passive VoIP requires additional considerations and is covered in a separate document: the *inContact WFO Customer Guide to Passive VoIP Recording*. You will need to refer to that document as well as this guide.

In addition to the TAPI-VoIP integration discussed in this guide, Uptivity also supports a ShoreTel integration using TAPI-WAV. Ask your Uptivity representative if you want additional information on this integration method.

What's New in this Version


- **ShoreTel Connect integration** — This integration has been tested with the latest version of ShoreTel software, known as ShoreTel Connect. Internal testing confirms that the existing integrations are supported on this version. Interoperability testing in ShoreTel's lab environments is pending. Some ShoreTel product names have changed slightly in ShoreTel Connect versus previous versions; refer to your ShoreTel resources for any clarification regarding ShoreTel products mentioned in this guide.

Customer Responsibilities

You are responsible for supplying the physical connection(s), IP connection(s), or both, to your telephone system and LAN, as well as obtaining any licensing required by ShoreTel. You are also responsible for configuring your ShoreTel system to support the recording integration. See the [Customer Integration Tasks](#) section for additional information.

ShoreTel TAPI-VoIP Integration Overview

The ShoreTel TAPI-VoIP integration is a passive recording method that communicates with the ShoreTel system using TAPI. NICE Uptivity receives call control events and metadata (such as CallerID) from ShoreTel Contact Center Director. Audio for desired calls is acquired through passive VoIP recording.

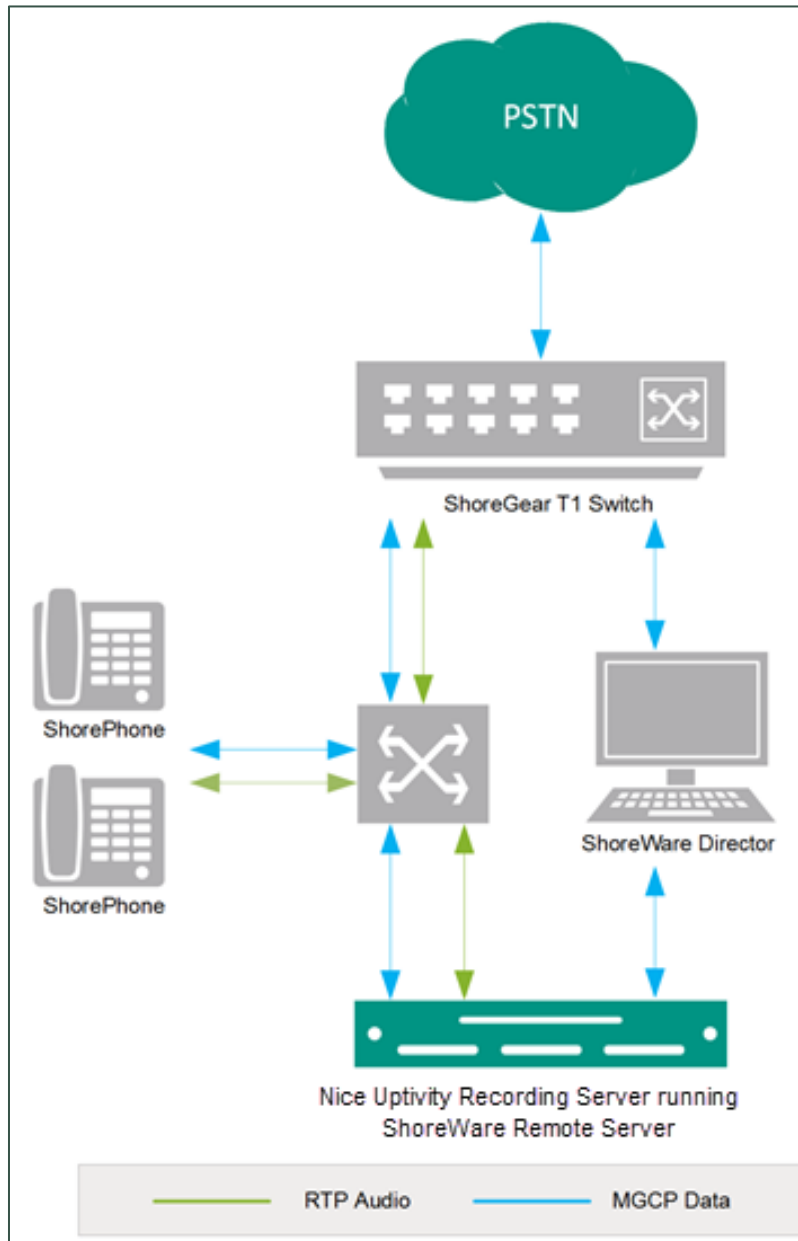

General architectural example of a ShoreTel TAPI-VoIP integration; the optional ShoreTel Contact Center is not shown

ShoreTel TAPI-VoIP Integration Overview

Component	Function
ShoreGear T1 Switch	Provides trunking to the central office.
ShoreTel Director	Allows system administrators to configure entities of the ShoreTel Contact Center and set the system parameters. Can be configured to set call variables that are passed to the TAPI interface.
ShoreWare Remote Server	Provides the CTI connection to the ShoreTel PBX. This software must be installed on the Uptivity recording server.
NICE Uptivity Server(s)	Receives audio, metadata, and call control events from the ShoreTel Contact Center Director. Associates metadata with audio and screen recordings (if applicable). Manages storage of completed files and generates call records in the Uptivity database. Provides user interface to Uptivity through the Web Portal .

Known Limitations

- ShoreTel uses proprietary encryption for SIP traffic, making Uptivity dependent on the TAPI messaging for recording. Therefore, Uptivity does **not** support recording ShoreTel SIP phones without TAPI.
- PBX client software pieces used in this integration (for example, ShoreWare Remote Server) are only supported on Microsoft Server 2012 R2 by ShoreTel v14.2.19.42.8801.0 or higher.
- For installations that use multiple **CTI Core** services, all recorders receive the same TAPI events from ShoreTel. Therefore, scripting, scheduling, or both must be used to distinguish which calls are recorded by each Core.
- ShoreTel TAPI integrations do not support the real-time blackout functionality in Uptivity

ShoreTel Requirements

Hardware

Review your ShoreTel installation and configuration guides, the administrator guides, and any hardware and system software specifications. These documents address server, agent computer, and telephone hardware requirements and restrictions that ShoreTel recommends. This integration requires:

- At least one (1) ShoreTel Voice Switch
- At least one (1) ShoreTel Connect Contact Center Director server

Software

- ShoreTel ShoreTel Connect or ShoreTel Mitel MiVoice Connect

Licensing

The integration requires the following licensing to be available:

- One (1) ShoreWare Remote Server Software license

NICE Uptivity Requirements

Hardware

Uptivity hardware requirements vary depending on system configurations. Appropriate hardware is identified during the system implementation process. For more information, search online help for keyword *site requirements*.

Software

- NICE Uptivity

Licensing

- One (1) Voice seat license per named agent **or**
- One (1) Voice concurrent session license for each simultaneous call that will be recorded
- Additional licensing may be required if the system includes optional features (for example, Uptivity Screen Recording)

Customer Configuration Overview

The following table provides a high-level overview of the customer configuration steps in ShoreTel TAPI-VoIP integrations.

Customer Configuration Steps for ShoreTel TAPI-VoIP Integrations	
1	Complete all necessary physical and IP connections between the recording server(s) and the LAN.
2	Complete the VoIP mirroring design and procedural tasks outlined in the <i>Customer Guide to Passive VoIP Recording</i> .
3	If desired, configure integration with ShoreTel Connect Contact Center.
4	After the Uptivity software has been installed and the Web Portal has been configured: Install ShoreTel Remote Server and Register ShoreTel Remote Server .

Customer Integration Tasks

The information in this section is provided for your reference only. Detailed steps for ShoreTel configuration can be found in ShoreTel's documentation, which is available on the ShoreTel website. You should always use the appropriate documentation from ShoreTel to install and configure ShoreTel components.

Configure Contact Center Integration (Optional)

If you use ShoreTel Contact Center software, you can optionally configure Contact Center to pass call metadata through ShoreTel Contact Center Director into the TAPI events received for a phone. The Uptivity installation team can modify the channel script to include this metadata in the call record.

For a complete description of mandatory and user-defined call profiles, and their associated user fields, see the *ShoreTel Contact Center Administrator Guide*.

1. On the Contact Center Server, in the directory in which ShoreTel Contact Center is installed, use a text editor (such as Notepad) to create a file named **shoretelcfg.ini**.
2. In the shoretelcfg.ini file, add a section named **call_profile**.
3. In the call_profile section, specify a key named **user_fields** with call profile field names as values. Separate the values with a comma. For example:

```
[call_profile]
user_fields=AGENT_NUMBER, AccNo, Balance, DueDate
```

4. Restart the ShoreTel Contact Center Server.

The specified call profile field values will now display in the TAPI call properties and be available to the Uptivity channel script.

Install ShoreTel Remote Server

After the Uptivity installation engineer has installed the software and configured the **Web Portal**, you must install the ShoreWare Remote Server software on the recording server. The Remote Server software can usually be downloaded from the ShoreTel Director web interface at the following URL:

<http://<directorhost>/ShoreWareDirector/RemoteInstall/>

☒ Replace <directorhost> with the TCP/IP address or host name of the customer's ShoreTel Contact Center Director server.


Follow the prompts to install the application server. When prompted for the IP address or name of the headquarters server, be sure to specify the IP address (or hostname) of the ShoreTel Contact Center Director. After a successful installation, you will be prompted to reboot the server.

For detailed instructions on installing Remote Server software, refer to the appropriate *ShoreTel Planning and Installation Guide* for the PBX version.

Register ShoreTel Remote Server

Once the Remote Server software has been installed, you must register the recording server in ShoreTel Connect Contact Center Director.

1. Go to the ShoreTel Contact Center Director Web administration site at the listed URL, where <directorhost> is the IP address or host name of the ShoreTel Director Server: **<http://<directorhost>/ShoreWareDirector/>**
2. Log in with an appropriately-permissioned account.
3. Click **Administration > Application Server**.

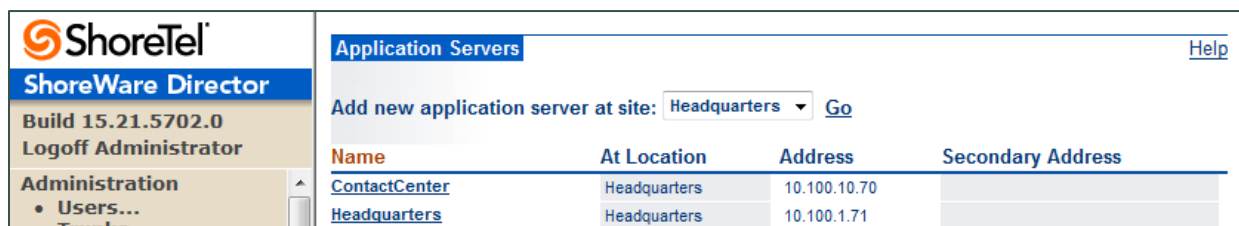


The screenshot shows the ShoreTel ShoreWare Director web interface. The left sidebar contains the logo and navigation options like 'Administration' and 'Users...'. The main content area is titled 'Application Servers' and includes a 'Help' link. Below the title, there is a form to 'Add new application server at site:' with a dropdown menu set to 'Headquarters' and a 'Go' button. A table lists existing application servers:

Name	At Location	Address	Secondary Address
ContactCenter	Headquarters	10.100.10.70	
Headquarters	Headquarters	10.100.1.71	

Customer Integration Tasks

4. On the **Application Servers** page, select the site to which the application server will be added and click **Go**.

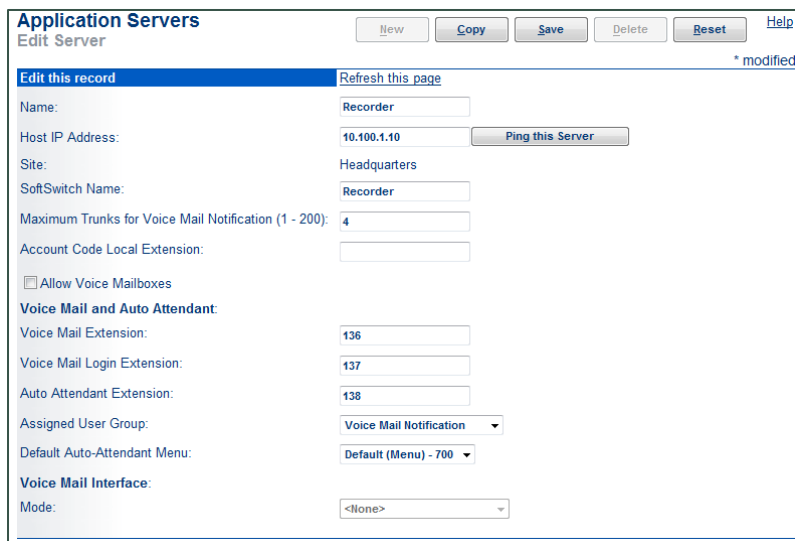

Application Servers
Edit Server

New Copy Save Delete Reset Help

Edit this record Refresh this page * modified

Name: Recorder

Host IP Address: 10.100.1.10 Ping this Server

Site: Headquarters

SoftSwitch Name: Recorder

Maximum Trunks for Voice Mail Notification (1 - 200): 4

Account Code Local Extension:

Allow Voice Mailboxes

Voice Mail and Auto Attendant:

Voice Mail Extension: 136

Voice Mail Login Extension: 137

Auto Attendant Extension: 138

Assigned User Group: Voice Mail Notification

Default Auto-Attendant Menu: Default (Menu) - 700

Voice Mail Interface:

Mode: <None>


5. On the **Edit Server** page, enter a **Name** for the Uptivity recording server.
6. In the **Host IP Address** field, enter the IP address of the Uptivity recording server on which you installed the Remote Server software.
7. Clear the checkbox for **Allow Voice Mailboxes**.
8. Click **Save**.

Customer Administration Tasks

There are no regular, ongoing administrative tasks related to this integration. If you add channels to your system, your Uptivity administrator will need to increase the channel count on the voice board in the **Web Portal**.

For more information on voice board tasks, search online help for keyword *voice boards*.

For more information on voice board and channel settings for this integration, see the *Customer Guide to Passive VoIP Recording*.

 You must restart the **CTI Core** service after any changes to voice boards, channels, or both.

Any other voice board changes should only be done under direct supervision from Uptivity Support. Done incorrectly, voice board modifications can have serious negative impact to your system. In addition, altering the hardware configuration of your system may void your warranty.