

NICE



UPTIVITY

Agile WFO for SMB

Customer Guide to Cisco Automatic Integrations

Introduction

Customer Guide to Cisco Automatic Integrations

Version: Cisco Automatic versions 10.5-12.5 are supported. This guide should be used with NICE Uptivity v18.x and higher.

Copyright: ©2021 NICE inContact, Inc.

Contact: Send suggestions or corrections regarding this guide to documentationrequests@incontact.com.

Table of Contents

Introduction.....	5
Audience.....	5
Goals.....	5
Assumptions.....	5
Need-to-Knows	5
Terminology.....	6
Customer Responsibilities	6
Cisco Automatic Integration Overview.....	7
Gateway Preferred Recording	9
Known Limitations	11
Audio Codec Support.....	11
Cisco Requirements	12
Hardware	12
Software	12
Licensing.....	12
NICE Uptivity Requirements	13
Network	13
Hardware	13
Software	13
Licensing.....	13
Customer Configuration Overview	14
Customer Integration Tasks.....	15

Introduction

Identify Phones that Support Recording.....	16
Configure a TAPI User Account for Uptivity	17
Configure a SIP Trunk Security Profile for the Recording Trunk.....	19
Configure a SIP Profile for the Recording Trunk	20
Create the SIP Recording Trunk	23
Create a Route Pattern for the SIP Recording Trunk	27
Create a Recording Profile.....	28
Enable Built-in-Bridge, Disable Privacy	29
Add Recording Option and Recording Profile to Line Appearances	30
Customer Administration Tasks	33

Introduction

Audience

This document is written for customers and prospective customers interested in using NICE Uptivity in a Cisco Automatic telephony environment. Readers who will perform procedures in this guide should have a basic level of familiarity with IP telephony, general networking, the Windows operating system, Cisco VoIP telephony, and NICE Uptivity.

Goals

The goal of this document is to provide knowledge, reference, and procedural information necessary to understand a proposed Cisco/ NICE Uptivity integration using Cisco Automatic, and to configure the Cisco equipment to support the integration.

This document is NOT intended as a specific system or network design document. If further clarification is needed, consult with your telephony vendor(s).

Assumptions

This document assumes the reader has access to an NICE Uptivity Sales Engineer, Project Manager, or other resource to assist in applying this information to the reader's environment.

Need-to-Knows



To facilitate ease of use, this document takes advantage of PDF bookmarks. By opening the bookmark pane, readers can easily refer to the portion(s) of the guide that are relevant to their needs. For example, the Uptivity application administrator can click on the **Customer Administration Tasks** bookmark to jump directly to that section.

To expand and collapse the bookmark pane, click on the bookmark icon on the left side of the document window.

For questions related to Uptivity configuration, consult the Uptivity installation team.

Introduction

Cisco Automatic can also be used, in various combinations, with TAPI, Cisco UCCE, or Cisco UCCX. In these scenarios, refer to the *Customer Guide to Cisco UCCE Integrations*, or the *Customer Guide to Cisco UCCX Integrations*, as appropriate.

Terminology

To ensure a common frame of reference, this guide uses the following terms:


- **CUCM** — Cisco Unified Communications Manager. CUCM is a software-based call-processing system that includes gateways, routers, phones, voicemail boxes, and a variety of other VoIP components. Sometimes referred to as CallManager.
- **UCCE** — Unified Contact Center Enterprise. UCCE delivers intelligent contact routing, call treatment, network-to-desktop CTI, and multichannel contact management over an IP infrastructure. It combines multichannel ACD functionality with IP telephony in a single solution.
- **UCCX** — Unified Contact Center Express. UCCX is a single-server customer interaction management solution for up to 400 agents.
- **TAPI** — Telephony Application Programming Interface. Like JTAPI, Cisco TAPI allows custom applications to monitor and interact with the CUCM and Cisco IP phones.
- **BiB** — Built-in Bridge. Capability of some Cisco IP phone models to fork the media stream and deliver audio from both sides of a phone call to an alternate destination (for example, NICE Uptivity).

Customer Responsibilities

You are responsible for supplying the physical connection(s), IP connection(s), or both to your telephone system and LAN, and for obtaining and loading any licensing required by Cisco. You are also responsible for configuring Cisco system components to support the recording integration. See the [Customer Integration Tasks](#) section for additional information.

Cisco Automatic Integration Overview

The Cisco Automatic integration uses the built-in bridge functionality of specific Cisco IP phones to fork the audio stream and deliver duplicate audio to NICE Uptivity. The call recordings are started when a SIP Invite message is received on the recorder. If paired with CTI source such as UCCE, UCCX, or TAPI the call is stopped on a CTI event. If no CTI source is configured the calls will stop on a SIP BYE message.

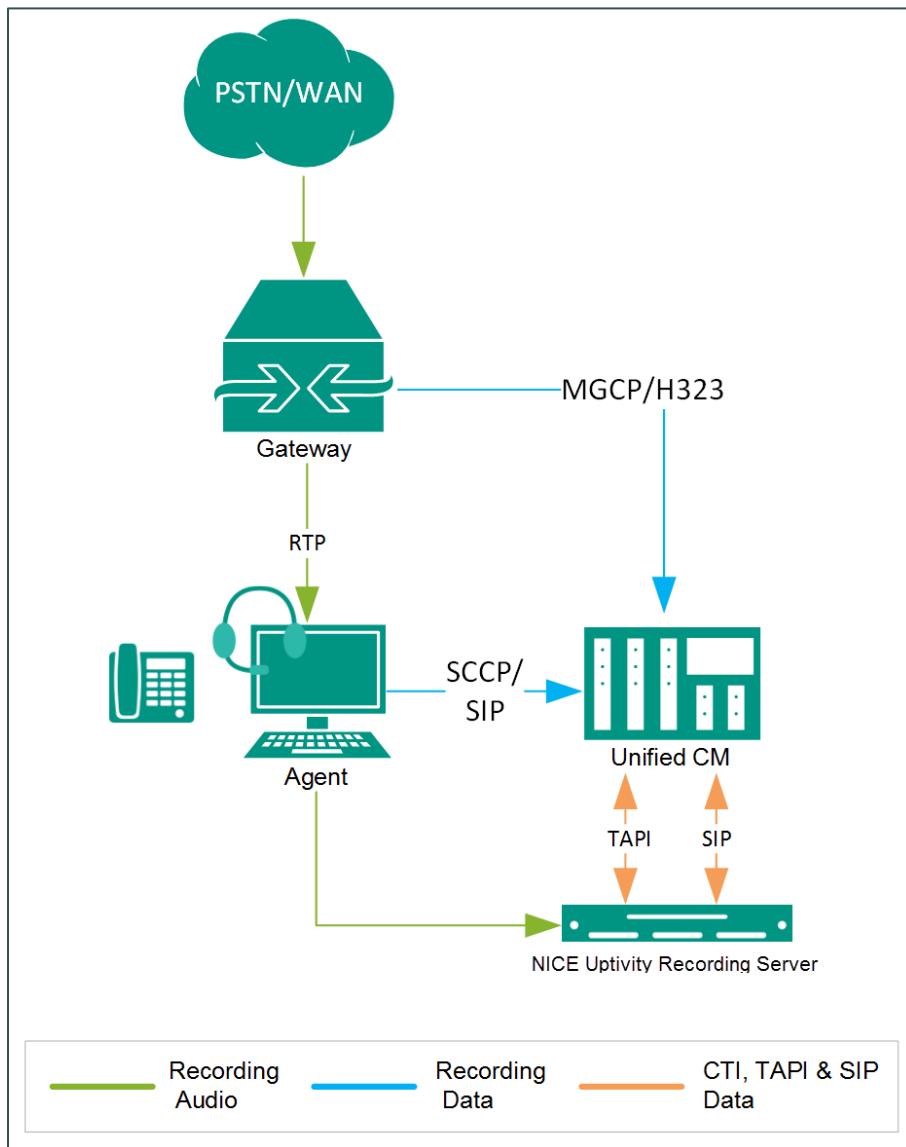


General architectural example of the Cisco Automatic integration

Cisco Automatic Integration Overview

Component	Function
Voice Gateway	Connects the customer network to the public network.
Cisco Unified Communications Manager (UCM)	The CUCM negotiates audio stream network ports and codecs between the phone and Uptivity using SIP on the Uptivity side and SCCP or SIP to the phone. Audio is redirected to the Uptivity recording server through a SIP Trunk.
NICE Uptivity Application Server	<p>Receives call control events and business data and provides a CTI interface for recording.</p> <p>The Uptivity server has these responsibilities:</p> <ul style="list-style-type: none"> • Sending call start/call stop messages using the Uptivity API • Starting and stopping recordings • Providing a SIP Trunk endpoint the CUCM uses for recording <p>Copying finished recordings to the Uptivity storage location</p>
Third Generation Phones	<ul style="list-style-type: none"> • Each third generation phone being recorded uses built-in bridge to forward audio streams for each side of the call to Uptivity.

Gateway Preferred Recording

Gateway Preferred recording may also be referred to as Network Based recording. The settings need to be reviewed by the Cisco administrator and applied to the voice gateway. When designing, keep the call flows in mind to ensure that the audio flows through the voice gateway.

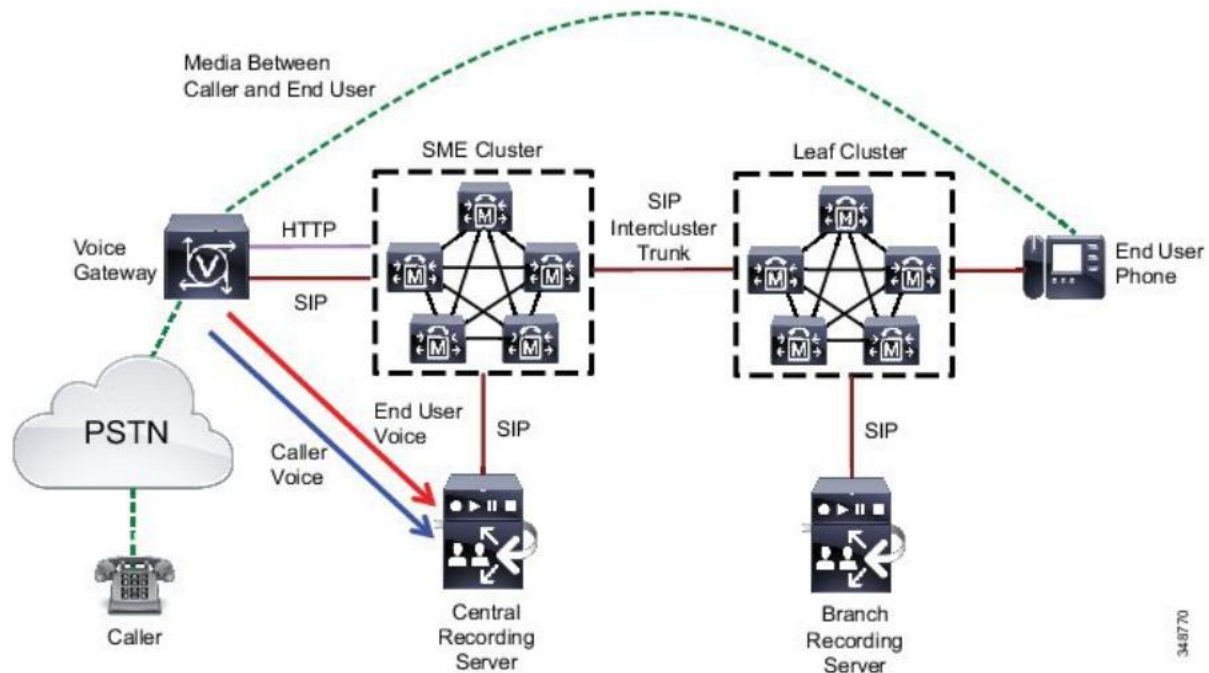

When deploying Unified CM network-based recording, observe the following guidelines:

- This solution is supported on a variety of platforms; for example, Cisco Unified Border Element running on a Cisco Integrated Services Router (ISR) G2. For detail requirements, refer to the latest version of the *Cisco Unified Communications Manager Features and Services Guide*.
- Only SIP is supported between the voice gateway and Cisco Unified CM, but SIP proxy servers are not supported.
- For inter-cluster recording, only a SIP trunk is supported to interconnect the clusters.
- Secure recording is not supported.
- IPv6 is not supported.

Cisco Unified CM allows the system administrator to set the Recording Media Source preference (either **Phone Preferred** or **Gateway Preferred**) when enabling recording on the line appearance of the device. Based on the preference configured and the recording resource availability in the system, Unified CM makes the

Cisco Automatic Integration Overview

decision to use either the gateway or the phone as the recording media source. For example, if an IP phone has recording enabled with **Phone Preferred**, but there is no recording resource available (no built-in bridge), the gateway would be used for call recording.

Regardless of the media forking devices used by Unified CM for call recording, Unified CM always provides the metadata about the near-end and far-end parties of the recorded calls to the recording server. The metadata resides in the FROM header of the SIP Invite and other SIP messages that are sent between Unified CM and the recording server.

For details about Unified CM silent call monitoring and call recording features, refer to the latest version of the *Cisco Unified Communications Manager Features and Services Guide*.

The following example sets up the router for Cisco Unified Communication IOS Services. It enables the HTTP server and the XMF providers. The configuration specifies the address and port that the application uses to communicate with the XMF provider.

```
!
uc wsapi
 message-exchange max-failures 100
 response-timeout 0
 source-address 172.156.19.38
 probing interval negative 20
 probing interval keepalive 255
 probing max-failures 3
!
provider xmf
 remote-url 1 http://test.com:8090/xmf1
 remote-url 2 http://172.19.156.53/xmf2
!
!
```

CLI's to enable UC Services API

```
!
http client connection timeout <1-60>
http client connection idle timeout <1-600>
!
ip http server
ip http timeout-policy idle 600 life 86400 requests 86400
ip http max-connections 1000
```

CLI's to enable HTTP Server

Here 2 XMF applications are configured with the applications ID's 1 (for Subscriber 1) and 2 (for Subscriber 2). Up to 32 applications can be configured.

For more information about Cisco configuration, check your *Cisco Unified Communication IOS Services* documentation.

Known Limitations

- The CUCM does not allow monitoring or recording of whisper intercom and talkback intercom calls (see "Intercom" in the *Cisco Unified CM Features and Services Guide*).
- DSP limitations in some phone models require both inbound and outbound audio streams on a phone to utilize the same codec.
- Cisco does not support BiB recording for phones that route through a phone proxy.

Audio Codec Support

The following codecs are supported by Uptivity for recording. Depending on the phone model used and DSP resources available, not all codecs may be supported by your CUCM. If you have any difficulties enabling a specific codec, please contact your Cisco support resource for assistance.

- G.711
- G.722
- G.729a
- iLBC

Cisco Requirements

Hardware

The features used in this method of recording require third generation phones that have BiB capability. Agent devices (phones) must be able to mix media for monitoring and to fork media for recording. The list of devices that support the monitoring and recording features varies per version and device pack. If you have questions, consult your Cisco account management team to determine whether your telephone sets have this capability.

Software

- Support for Uptivity Record started with Cisco Unified Communications Manager v10.0.
- If using TAPI for metadata and call stops the Cisco TAPI Service Provider (TSP) must be installed on the Uptivity system
- The following table specifies supported Windows OS versions with the corresponding minimum version of the TSP required for each OS version:

Operating System	32-bit	64-bit	TSP Version Required
Windows 2008 R2	X	√	Windows 2008 R2 requires Cisco TSP 8.5(1) or later.
Windows 2012 R2	X	√	Windows 2012 requires Cisco TSP 10.0 or later. Windows 2012 R2 requires Cisco TSP 10.5 or later.
Windows 2016	X	√	Windows 2016 requires Cisco TSP 11.5 or later.

Licensing

Each device (Cisco Unified IP Phones, soft phones, third-party devices, and video devices) provisioned in the system corresponds to a number of device license units (DLUs), depending on its capabilities. The total number of units is managed in CUCM to determine capacity. The integration uses the BiB capabilities for each recorded phone.

NICE Uptivity Requirements

Network

Sufficient network bandwidth is required to support audio traffic between each agent phone being recorded and Uptivity.

Hardware

Uptivity hardware requirements vary depending on system configurations. Appropriate hardware is identified during the system implementation process. For additional information, search online help for keyword *site requirements*.

Software

- NICE Uptivity

Additional third-party software is required for this integration:

- CACE WinPcap version 4.1.x (available from the WinPcap website)

Licensing

- One (1) Voice seat license per named agent **or**
- One (1) Voice concurrent session license for each simultaneous call that will be recorded
- Additional licensing may be needed if optional features (such as inContact Screen Recording) are included in the system.

Customer Configuration Overview

The following table provides a high-level overview of the customer configuration steps in Cisco Automatic integrations. Links are provided for tasks that are covered in this guide.

Customer Configuration Steps for Cisco Automatic Integrations	
1	Complete all necessary physical and IP connections between the recording server(s) and the LAN.
2	Obtain any necessary Cisco software and licensing.
3	Identify Phones that Support Recording . This step is to verify that all desired recording locations have an appropriate phone.
4	If needed Configure a TAPI User Account for Uptivity .
5	
6	
7	
8	Create a Route Pattern for the SIP Recording Trunk .
9	
10	For all phones to be recorded,
11	For all phones to be recorded, Add Recording Option and Recording Profile to Line Appearances . Tell your Uptivity installation team which Recording Option you select.

Customer Integration Tasks

The information in this section is provided for your reference only. Detailed steps for Cisco configuration can be found in Cisco's documentation, which is available on the Cisco website. You should always use the appropriate documentation from Cisco to install and configure Cisco components.

Instructions in these procedures assume that your Cisco environment uses the default settings. You should note any non-default settings and discuss them with your Uptivity installation team.


Most of the instructions in this section are based on CUCM Administrator v9.1. Other versions may have different settings.

NICE inContact recommends that administrators performing the configuration tasks for any Cisco integration use the [Customer Configuration Overview](#) table and check each customer step as it is completed. You may also print each configuration procedure and check each step in the procedure as you complete it. The majority of Uptivity deployments which experience initial errors do so because of a Cisco setting being missed.

If you are combining the Cisco Automatic integration with an additional integration like UCCE, or UCCX, complete the customer procedures for this integration first. Then complete the tasks in the additional appropriate guide(s).

Identify Phones that Support Recording

For additional information about the Cisco Unified Reporting application, refer to the *Cisco Unified Reporting Administration Guide*.

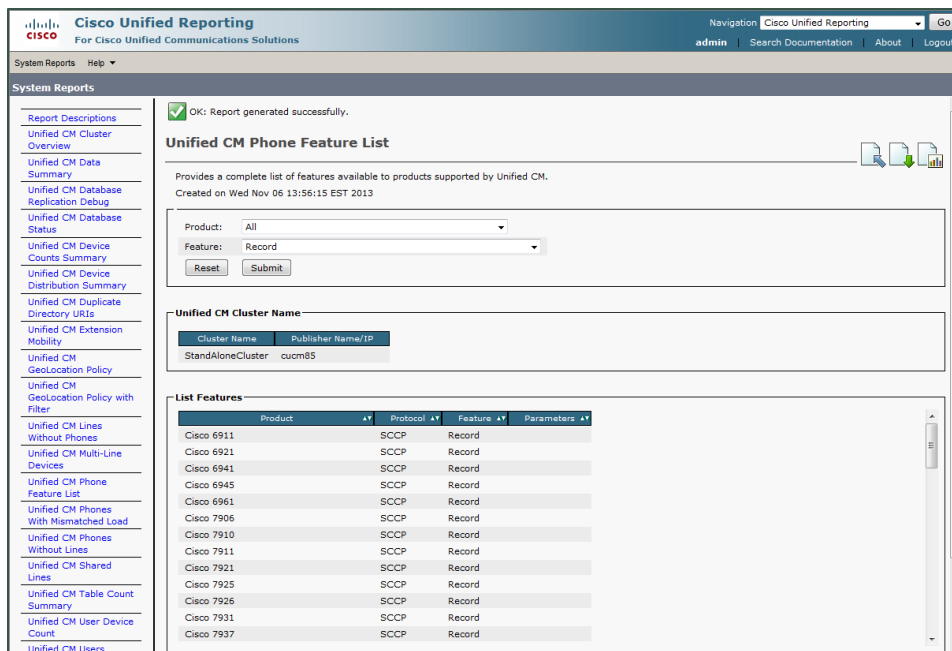

You can use the Cisco Unified Reporting application to generate a complete list of devices that support monitoring and recording for a particular release and device pack.

1. Start Cisco Unified Reporting in one of these ways:
 - a. Choose **Cisco Unified Reporting** in the Navigation menu in Cisco Unified Communications Manager Administration and click **Go**.
 - b. Choose **File > Cisco Unified Reporting** at the Cisco Unified Real Time Monitoring Tool (RTMT) menu.
 - c. Enter `https://<server name or IP address>:8443/cucreports/` and then enter your authorized username and password.
2. Click **System Reports** in the navigation bar and in the left column list of reports, click **Unified CM Phone Feature List**.
3. Click **Generate a new report** to generate a new report or click **Unified CM Phone Feature List** if the report already exists.
4. For **Product**, select **All** from the drop-down list.

- For **Feature**, select *Record* from the drop-down list.
- Click **Submit**.

The **List Features** pane displays a list of all devices that support the recording feature. You can click on the up and down arrows next to the column headers (**Product** or **Protocol**) to sort the list.

Configure a TAPI User Account for Uptivity

If TAPI is needed, a user account must be created on the CUCM for Uptivity to use to connect and receive TAPI events for phones. This user account must be configured to monitor all devices that you want to record. If a device is not listed as a **Controlled Device** in the **Device Information** section of the user account, it will **not** be monitored or recorded. Device IDs shown in this section are the Selsius identifiers of the phones ("SEP" followed by the MAC address of the device).

The Uptivity user account must also be added to all Access Control Groups whose names begin with "Standard CTI" **except** for the "Standard CTI Allow Reception of SRTP Key Material" and "Standard CTI Secure Connection" groups. Only select the Secure Connection group if TAPI encryption is configured. If you select this group and encryption is not configured, the CUCM can refuse "insecure" or non-encrypted connections, and call recording will not occur.

- Log in to the **Cisco Unified CM Administration** portal with an administrative account.
- Select **User Management > Application User**.
- On the **Find and List Application Users** page, click **Add New**.
- On the **Application User Configuration** page, set the **User ID** field and the **Password** in the **Application User Information** section. Note these values and provide them to your Uptivity installation team.
- Under **Device Information**, move any devices that Uptivity will record to the **Controlled Devices** panel.

Device Information

Available Devices

- SEP001380C29B23
- SEP001E4A924C13
- SEP001EF7C3F62B
- SEP001F6C810D39
- SEP44ADD9BC39EE

Controlled Devices

- SEP001280E52C21
- SEP00137F0031C8
- SEP00137F0031C9
- SEP001646CB51B2
- SEP001E7AC340E0

Find more Phones

Find more Route Points

Customer Integration Tasks

- Under **Permissions Information**, click **Add to Access Control Group**.
- Select the appropriate groups (note the excluded groups in the following image) and click **Add Selected**.

<input type="checkbox"/>	Name ^	Roles	Copy
<input checked="" type="checkbox"/>	Standard CTI Allow Call Monitoring		
<input checked="" type="checkbox"/>	Standard CTI Allow Call Park Monitoring		
<input checked="" type="checkbox"/>	Standard CTI Allow Call Recording		
<input checked="" type="checkbox"/>	Standard CTI Allow Calling Number Modification		
<input checked="" type="checkbox"/>	Standard CTI Allow Control of All Devices		
<input checked="" type="checkbox"/>	Standard CTI Allow Control of Phones supporting Connected Xfer and conf		
<input checked="" type="checkbox"/>	Standard CTI Allow Control of Phones supporting Rollover Mode		
<input type="checkbox"/>	<u>Standard CTI Allow Reception of SRTP Key Material</u>		
<input checked="" type="checkbox"/>	Standard CTI Enabled		
<input type="checkbox"/>	<u>Standard CTI Secure Connection</u>		

Configure a SIP Trunk Security Profile for the Recording Trunk

SIP Trunk Security Profile Information	
Name*	CallCopy SIP Trunk Security Profile
Description	CallCopy SIP Trunk Security Profile
Device Security Mode	Non Secure
Incoming Transport Type*	TCP+UDP
Outgoing Transport Type	UDP
<input type="checkbox"/> Enable Digest Authentication	
Nonce Validity Time (mins)*	600
X.509 Subject Name	
Incoming Port*	5060
<input type="checkbox"/> Enable Application Level Authorization	
<input type="checkbox"/> Accept Presence Subscription	
<input type="checkbox"/> Accept Out-of-Dialog REFER**	
<input type="checkbox"/> Accept Unsolicited Notification	
<input type="checkbox"/> Accept Replaces Header	
<input type="checkbox"/> Transmit Security Status	

NICE inContact recommends creating a separate SIP trunk security profile for the trunk between the CUCM and the recording server. This profile prevents changes made to other security profiles from interfering with call recording. Since changing security settings requires a restart of any trunks using these settings, creating a separate security profile also minimizes the need to reset existing SIP trunks.

1. Log in to the **Cisco Unified CM Administration** portal with an administrative account.
2. Select **System > Security > SIP Trunk Security Profile**.
3. Click **Add New**.
4. Enter a **Name** and a **Description** for this trunk.
5. For **Device Security Mode**, select *Non Secure* from the drop-down list.
6. For **Incoming Transport Type**, select *TCP+UDP* from the drop-down list.
7. For **Outgoing Transport Type**, select *UDP* from the drop-down list.
8. Do not select (or clear if selected) the checkbox for **Enable Digest Authentication**.

Leave all other settings at their default values.

Configure a SIP Profile for the Recording Trunk

NICE inContact recommends creating a separate SIP profile for the recording trunk, which protects it from changes made to SIP profiles for other trunks. All SIP devices using this profile must be restarted before any changes will take effect. This SIP profile should use the default settings shown in the images in this section. If any settings in your SIP profile do not match, discuss this with your Uptivity installation team.

1. Log in to the **Cisco Unified CM Administration** portal with an administrative account.
2. Select **Device > Device Settings > SIP Profile**.
3. Click **Add New**.
4. Enter a **Name** and **Description** for the SIP profile.
5. Verify the settings as shown and then click **Save**.

SIP Profile Information	
Name*	Gschmidt Dev SIP Profile
Description	Gschmidt Dev SIP Profile
Default MTP Telephony Event Payload Type*	101
Early Offer for G.Clear Calls*	Disabled
SDP Session-level Bandwidth Modifier for Early Offer and Re-invites*	TIAS and AS
User-Agent and Server header information*	Send Unified CM Version Information as User-Agen
Accept Audio Codec Preferences in Received Offer*	Default
Dial String Interpretation*	Phone number consists of characters 0-9, *, #, anc
<input type="checkbox"/> Redirect by Application	
<input type="checkbox"/> Disable Early Media on 180	
<input type="checkbox"/> Outgoing T.38 INVITE include audio mline	
<input type="checkbox"/> Enable ANAT	
<input type="checkbox"/> Require SDP Inactive Exchange for Mid-Call Media Change	
<input type="checkbox"/> Use Fully Qualified Domain Name in SIP Requests	
<input type="checkbox"/> Assured Services SIP conformance	

Parameters used in Phone	
Timer Invite Expires (seconds)*	<input type="text" value="180"/>
Timer Register Delta (seconds)*	<input type="text" value="5"/>
Timer Register Expires (seconds)*	<input type="text" value="3600"/>
Timer T1 (msec)*	<input type="text" value="500"/>
Timer T2 (msec)*	<input type="text" value="4000"/>
Retry INVITE*	<input type="text" value="6"/>
Retry Non-INVITE*	<input type="text" value="10"/>
Start Media Port*	<input type="text" value="16384"/>
Stop Media Port*	<input type="text" value="32766"/>
Call Pickup URI*	<input type="text" value="x-cisco-serviceuri-pickup"/>
Call Pickup Group Other URI*	<input type="text" value="x-cisco-serviceuri-opickup"/>
Call Pickup Group URI*	<input type="text" value="x-cisco-serviceuri-gpickup"/>
Meet Me Service URI*	<input type="text" value="x-cisco-serviceuri-meetme"/>
User Info*	<input type="text" value="None"/>
DTMF DB Level*	<input type="text" value="Nominal"/>
Call Hold Ring Back*	<input type="text" value="Off"/>
Anonymous Call Block*	<input type="text" value="Off"/>
Caller ID Blocking*	<input type="text" value="Off"/>
Do Not Disturb Control*	<input type="text" value="User"/>
Telnet Level for 7940 and 7960*	<input type="text" value="Disabled"/>
Resource Priority Namespace	<input type="text" value="< None >"/>
Timer Keep Alive Expires (seconds)*	<input type="text" value="120"/>
Timer Subscribe Expires (seconds)*	<input type="text" value="120"/>
Timer Subscribe Delta (seconds)*	<input type="text" value="5"/>
Maximum Redirections*	<input type="text" value="70"/>
Off Hook To First Digit Timer (milliseconds)*	<input type="text" value="15000"/>
Call Forward URI*	<input type="text" value="x-cisco-serviceuri-cfwdall"/>
Speed Dial (Abbreviated Dial) URI*	<input type="text" value="x-cisco-serviceuri-abbrdial"/>
<input checked="" type="checkbox"/> Conference Join Enabled <input type="checkbox"/> RFC 2543 Hold <input checked="" type="checkbox"/> Semi Attended Transfer <input type="checkbox"/> Enable VAD <input type="checkbox"/> Stutter Message Waiting <input type="checkbox"/> MLPP User Authorization	

Customer Integration Tasks

Normalization Script	
Normalization Script < None >	
<input type="checkbox"/> Enable Trace	
Parameter Name	Parameter Value
1	<input type="text"/>
<input type="button" value="+"/> <input type="button" value="-"/>	
Incoming Requests FROM URI Settings	
Caller ID DN	<input type="text"/>
Caller Name	<input type="text"/>
Trunk Specific Configuration	
Reroute Incoming Request to new Trunk based on*	Never
RSVP Over SIP*	Local RSVP
Resource Priority Namespace List	< None >
<input checked="" type="checkbox"/> Fall back to local RSVP	
SIP Rel1XX Options*	Disabled
Video Call Traffic Class*	Mixed
Calling Line Identification Presentation*	Default
<input type="checkbox"/> Deliver Conference Bridge Identifier	
<input type="checkbox"/> Early Offer support for voice and video calls (insert MTP if needed)	
<input type="checkbox"/> Send send-receive SDP in mid-call INVITE	
<input type="checkbox"/> Allow Presentation Sharing using BFCP	
<input type="checkbox"/> Allow iX Application Media	
<input type="checkbox"/> Allow Passthrough of Configured Line Device Caller Information	
<input type="checkbox"/> Reject Anonymous Incoming Calls	
<input type="checkbox"/> Reject Anonymous Outgoing Calls	
SIP OPTIONS Ping	
<input type="checkbox"/> Enable OPTIONS Ping to monitor destination status for Trunks with Service Type "None (Default)"	
Ping Interval for In-service and Partially In-service Trunks (seconds)*	60
Ping Interval for Out-of-service Trunks (seconds)*	120
Ping Retry Timer (milliseconds)*	500
Ping Retry Count*	6

Create the SIP Recording Trunk

The audio streams to be recorded will be routed to Uptivity over a SIP trunk configured on the CUCM. Except where specifically noted, all settings should match the default settings shown in the images in this section. If any settings in your SIP profile do not match, discuss this with your Uptivity installation team.

1. Log in to the **Cisco Unified CM Administration** portal with an administrative account.
2. Select **Device > Trunk**.
3. Click **Add New**.
4. For **Trunk Type**, select *SIP Trunk* from the drop-down list.
5. For **Device Protocol**, select *SIP* from the drop-down list.
6. For **Trunk Service Type**, leave the setting at *None (Default)*, and click **Next**.
7. Enter a **Device Name**.
8. For **Device Pool**, select *Default* from the drop-down list.
9. In **Destination Address** in the **SIP Information**, enter the IP address assigned to the Uptivity recording server (that is, the server on which the **CTI Core** service for this integration is running). If multiple destinations are configured, you must enable the **SIP Options Ping** setting for the SIP Profile that is associated to the recorder's SIP trunk.
10. In **Destination Port** in the **SIP Information**, enter *5060*.
11. For **SIP Trunk Security Profile** under **SIP Information**, enter the name of the profile this trunk will use (see

Customer Integration Tasks

12. [Configure a SIP Trunk Security Profile for the Recording Trunk](#)).
13. For **SIP Profile** under **SIP Information**, enter the name of the profile this trunk will use (see

14. [Configure a SIP Profile for the Recording Trunk](#)).

15. Verify that all remaining settings on the **Trunk Configuration** page match the default settings in the images shown here and click **Save**.

Device Information	
Product:	SIP Trunk
Device Protocol:	SIP
Trunk Service Type	None(Default)
Device Name*	CallCopyRecorder
Description	
Device Pool*	Default
Common Device Configuration	< None >
Call Classification*	Use System Default
Media Resource Group List	< None >
Location*	Hub_None
AAR Group	< None >
Tunneled Protocol*	None
QSIG Variant*	No Changes
ASN.1 ROSE OID Encoding*	No Changes
Packet Capture Mode*	None
Packet Capture Duration	0
<input type="checkbox"/> Media Termination Point Required	
<input checked="" type="checkbox"/> Retry Video Call as Audio	
<input type="checkbox"/> Path Replacement Support	
<input type="checkbox"/> Transmit UTF-8 for Calling Party Name	
<input type="checkbox"/> Transmit UTF-8 Names in QSIG APDU	
<input type="checkbox"/> Unattended Port	
<input type="checkbox"/> SRTP Allowed - When this flag is checked, Encrypted TLS needs to be configured in the network to provide end to end security. Failure to do so will expose keys and other information.	
Consider Traffic on This Trunk Secure*	When using both sRTP and TLS
Route Class Signaling Enabled*	Default
Use Trusted Relay Point*	Default
<input checked="" type="checkbox"/> PSTN Access	
<input type="checkbox"/> Run On All Active Unified CM Nodes	

Customer Integration Tasks

Call Routing Information

Remote-Party-Id
 Asserted-Identity
 Asserted-Type* Default
 SIP Privacy* Default

Inbound Calls

Significant Digits* All
 Connected Line ID Presentation* Default
 Connected Name Presentation* Default
 Calling Search Space < None >
 AAR Calling Search Space < None >
 Prefix DN

Redirecting Diversion Header Delivery - Inbound

Incoming Calling Party Settings

If the administrator sets the prefix to Default this indicates call processing will use prefix at the next level setting (DevicePool/Service Parameter). Otherwise, the value configured is used as the prefix unless the field is empty in which case there is no prefix assigned.

Clear Prefix Settings Default Prefix Settings

Number Type	Prefix	Strip Digits	Calling Search Space	Use Device Pool CSS
Incoming Number	Default	0	< None >	<input checked="" type="checkbox"/>

Connected Party Settings

Connected Party Transformation CSS < None >
 Use Device Pool Connected Party Transformation CSS

Outbound Calls

Called Party Transformation CSS < None >
 Use Device Pool Called Party Transformation CSS
 Calling Party Transformation CSS < None >
 Use Device Pool Calling Party Transformation CSS
 Calling Party Selection* Originator
 Calling Line ID Presentation* Allowed
 Calling Name Presentation* Allowed
 Calling and Connected Party Info Format* Deliver DN only in connected party

Redirecting Diversion Header Delivery - Outbound
 Redirecting Party Transformation CSS < None >
 Use Device Pool Redirecting Party Transformation CSS

Caller Information

Caller ID DN
 Caller Name
 Maintain Original Caller ID DN and Caller Name in Identity Headers

SIP Information

Destination

Destination Address is an SRV

1*	Destination Address	Destination Address IPv6	Destination Port
			5060

MTP Preferred Originating Codec* 711ulaw
 Presence Group* Standard Presence group
 SIP Trunk Security Profile* CallCopy SIP Trunk Security Profile
 Rerouting Calling Search Space < None >
 Out-Of-Dialog Refer Calling Search Space < None >
 SUBSCRIBE Calling Search Space < None >
 SIP Profile* CallCopy SIP Profile
 DTMF Signaling Method* No Preference

Normalization Script

Normalization Script < None >

Enable Trace

1	Parameter Name	Parameter Value

Create a Route Pattern for the SIP Recording Trunk

You must configure a route pattern extension to route audio streams from the BiB to the newly-created SIP trunk.

1. Log in to the **Cisco Unified CM Administration** portal with an administrative account.
2. Select **Call Routing > Route/Hunt > Route Pattern**.
3. Click **Add New**.
4. Enter a **Route Pattern** number.
5. Set the **Gateway/Route List** value to the SIP trunk.
6. Do not select (or clear if selected) the check box for **Require Forced Authorization Code**. This pattern cannot require a forced authorization code or Uptivity will not receive call audio.
7. Click **Save**.

If you receive messages about activating an Authorization Code and resetting the Gateway, follow the direction specified in those messages.

Create a Recording Profile

Put your section name here

Name*

Recording Calling Search Space

Recording Destination Address*

You must create a recording profile for the route pattern assigned to the SIP recording trunk. This recording profile must reference the correct recording calling search space for the phones you wish to record. A misconfigured search space can result in recordings with no audio and line errors in logging.

1. Log in to the **Cisco Unified CM Administration** portal with an administrative account.
2. Select **Device > Device Settings > Recording Profile**.
3. Click **Add New**.
4. Enter a **Name**.
5. For **Recording Calling Search Space**, select *None*, *Default*, or the appropriate search space from the drop-down list.
6. For **Recording Destination Address**, enter the route pattern assigned to the SIP recording trunk.
7. Click **Save**.

Enable Built-in-Bridge, Disable Privacy

Built-in-Bridge (BiB) and Privacy mode can be configured at both the device and server level. The instructions below are for devices.

BiB and Privacy have these setting options: **On**, **Off**, and **Default**. The **Default** option causes the device to use the server-level value for this setting and you must select this value if these settings are configured at the server level. If **Default** is not used, the device-level setting overrides the server-level setting. Conflicts between the server and device-level settings prevent call recording.

You must enable the BiB feature on every phone to be recorded. This feature is what creates a separate audio stream of any in-progress call and routes it to the Uptivity system for recording. You can optionally use the Bulk Administration Tool to create and schedule a job that will update multiple phones at once. See your Cisco documentation for specific instructions.

Device Information	
Registration	Registered with Cisco Unified Communications Manager cucm85
IP Address	10.100.10.63
Active Load ID	SCCP42.9-1-1SR1S
<input checked="" type="checkbox"/> Device is Active	
<input checked="" type="checkbox"/> Device is trusted	
MAC Address*	001E4A924C13
Description	SEP001E4A924C13
Device Pool*	Default View Details
Common Device Configuration	< None > View Details
...	
Network Locale	< None >
Built In Bridge*	On
Privacy*	Off
Device Mobility Mode*	Default View Current Device Mobility

1. Log in to the **Cisco Unified CM Administration** portal with an administrative account.
2. Select **Device > Phone**.
3. Run a query to locate devices you want to record. Queries can be run against many parameters, such as **Device Name** or a particular **Directory Number** associated with a device.
4. From the resulting list of phones, click **Device Name** to edit the **Phone Configuration**.
5. Under the Device Information section, set **Built-in-Bridge** to **On**.
6. Set **Privacy** to **Off**. Phones with the privacy feature enabled cannot be recorded.

Repeat this task for all phones to be recorded.

Customer Integration Tasks

Add Recording Option and Recording Profile to Line Appearances


The recording profile (see

[Create a Recording Profile](#)) must be added to each individual line appearance on a phone so that recording is allowed for that appearance. You also need to configure recording options for the appearance. This integration supports the **Selective Call Recording Enabled** and **Automatic Call Recording Enabled** options. Your Uptivity installation team needs to know which recording option you are using.

An alternate way of locating directory numbers is to select **Call Routing > Directory Number**. You can optionally use the Bulk Administration Tool to schedule a job that will update multiple line appearances at once.

ⓘ When you create new phones, be aware that using the **Copy** or **Super Copy** option does not copy the line/directory number information. The Add Recording Option and Recording Profile to Line Appearances task must be performed manually.

1. Log in to the **Cisco Unified CM Administration** portal with an administrative account.
2. Select **Device > Phone**.
3. Run a query to locate devices you want to record. Queries can be run against many parameters, such as **Device Name** or a particular **Directory Number** associated with a device.
4. From the resulting list of phones, click **Device Name** to edit the **Phone Configuration**.
5. Click the **Line Appearance** to be recorded under the **Association Information** section.

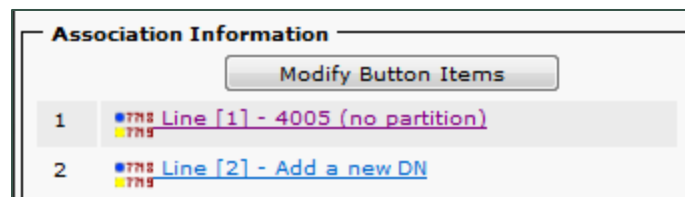

6. Enable the correct **Recording Option** in the **Line Settings** section.
7. Set **Recording Profile** to the profile created earlier.
8. Set **Recording Media Source** to *Phone Preferred*.
9. Set **Recording Option** to *Automatic Call Recording Enabled*.
10. Click **Save**.

Customer Integration Tasks

Recording Option*	Automatic Call Recording Enabled ▼
Recording Profile	QA ▼
Recording Media Source*	Phone Preferred ▼
Monitoring Calling Search Space	< None > ▼

Repeat this task for any lines that will be recorded.

Customer Administration Tasks

There are no regular, ongoing administrative tasks related to this integration. If you add channels to your system, your Uptivity administrator will need to increase the channel count on the voice board in the **Web Portal**. For more information on voice board tasks, search online help for keyword *voice boards*.

 You must restart the **CTI Core** service after any changes to voice boards, channels, or both.

Any other voice board changes should only be done under direct supervision from Uptivity Support. Done incorrectly, voice board modifications can have serious negative impact to your system. In addition, altering the hardware configuration of your system may void your warranty.

The Cisco Automatic integration streams audio from the phone to Uptivity and supports multiple calls on the same line or multiple lines on the same phone simultaneously. Therefore, it is important **not** to specify any devices on the voice board.